

## Operation Instructions for Merging Line Control Software



1. Selectable ports available. The ports that can be connected COM port and NFC port

If only one configurator is connected, it can be omitted and there will be a default port

2. After connecting the driver to the programmer, click the "Connect" button. At this point, the programming software entering will be automatically recognized. If there is no action on this page, please check the wiring or connect to another port
3. After a successful connection, it will redirect to the available programming software corresponding to this power supply, and you can use it directly